

Automatic Dicing Saw

DAD3350

Flexibility for diverse processing needs



Flexible Design

The DAD3350 (maximum workpiece size $\phi 8''$ [standard], 250 mm square [optional]) has been designed to process a wide variety of materials with either a 1.8 kW spindle (standard; supports 2" blades) or 2.2 kW high-torque spindle (optional; supports 3"-5" blades). Whether your material is ultra-thin to several millimeters thick, single wafer or multiple panel (optional), straight cut or optical angle cut (optional), the DAD3350 can be customized for your applications needs.

Process Quality

The field proven bridge-type frame structure optimizes rigidity and stability. To reduce transient vibration the DAD3350 utilizes cast iron for the bridge-type frame resulting in superior and consistent cut quality.

Machine Utilization


With a return speed of 600 mm/s, theta speed of 180 degree/s, and Y-axis speed of 200 mm/s the DAD3350 spends more time cutting and less time preparing to cut.

Operation

The Graphical User Interface (GUI) operates via an LCD touch screen. While improving the ease of use, the GUI also features on screen real time display illustrating process details.



Automatic Dicing Saw DAD3350

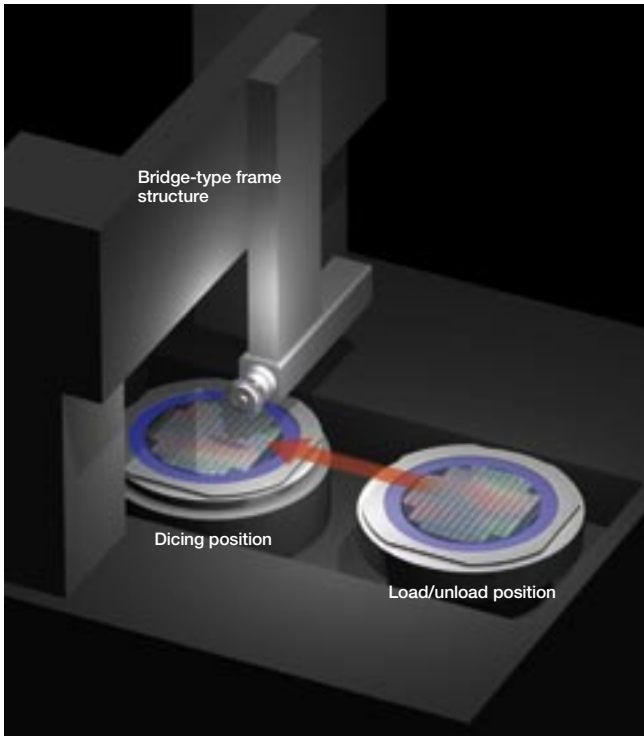

Process Controls


Auto alignment, auto focus, and auto kerf check features - all standard - directly improve productivity. In addition, the microscope includes a positive air pressure mechanism and a lens shutter to prevent contamination. The DAD3350 also includes advanced process control features such as a cutting water flow control and spindle current monitoring to support process analysis. As an option, a dual-magnification microscope is available to help reduce alignment times.

Small Footprint

The bridge-type frame structure reduces footprint while increasing performance. Suspended from the bridge is a front-mounted spindle, which provides greater space to process large area substrates.



LCD touch screen

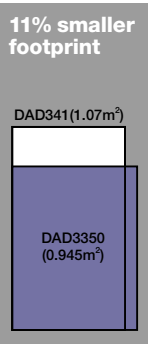

DAD3350 Specifications

Spindle	-	1.8kW	2.2kW
Workpiece Size	-	Max. $\phi 8"$ Max. 250 mm square (*1)	
X-axis	Cutting range	mm	260
	Max. cutting speed	mm/s	600
Y-axis	Cutting range	mm	260
	Index step	mm	0.0001
	Positioning accuracy	mm	0.003/300 (Single error) 0.002/5
Z-axis	Max. stroke	mm	32.2 31.4
	Moving resolution	mm	0.00005
	Repeatability accuracy	mm	0.001
	Max. blade size(*2)	mm	$\phi 58$ $\phi 127$
θ-axis	Max. rotating angle	deg.	380
Spindle	Output	kW	1.8 at 60,000 min ⁻¹ 2.2 at 30,000 min ⁻¹
	Rated torque	N·m	0.29 0.7
	Revolution speed range	min ⁻¹	6,000 ~ 60,000 3,000 ~ 30,000
Applicable Tape Frame	-	2-8-1	
Utilities	Power supply	-	200 ~ 240 V AC $\pm 10\%$, 3-phase (without transfer) 380 ~ 415 V AC $\pm 10\%$, 3-phase (with transfer)
	Power consumption	-	-
	When processing	kW	0.9 (for reference)
	During warm-up	kW	0.8 (for reference)
	Max. power	kVA	4.9
	Air pressure	MPa	0.5 ~ 0.8
	Air max. consumption	L/min(ANR)	200
	Cutting water	-	-
	Water pressure	MPa	0.2 ~ 0.4
	Max. Consumption flow rate	L/min	4.0
	Cooling water	-	-
	Water pressure	MPa	0.2 ~ 0.4
	Consumption flow rate	L/min	1.5 at 0.3 MPa
	Exhaust duct capacity	m ³ /min	5.0
	Machine dimensions (W x D x H)	mm	900 x 1,050 x 1,800
	Machine weight	kg	Approx. 1,200 (without transformer for overseas use) Approx. 1,268 (with transformer for overseas use)

(*1) A special jig is required for this function.

(*2) When selecting optional specification.

Environmental conditions

- Use clean, oil-free air at a dew point of $-15\text{ }^{\circ}\text{C}$ or less. (Use a residual oil: 0.1 ppm. Filtration rating: 0.01 $\mu\text{m}/99.5\%$ or more).
- Keep room temperature fluctuations within $\pm 1\text{ }^{\circ}\text{C}$ of the set value. (Set value should be between 20 ~ 25 $^{\circ}\text{C}$).
- Keep cutting water 2 $^{\circ}\text{C}$ above room temperature (fluctuations within $\pm 1\text{ }^{\circ}\text{C}$).
- Keep spindle cooling water the same as room temperature between 20 ~ 25 $^{\circ}\text{C}$ (fluctuations within $\pm 1\text{ }^{\circ}\text{C}$).
- The machines should be used in an environment, free from external vibration. Do not install machine near a ventilation opening, heat generation equipment or oil mist generating parts.
- This machine uses water.
In case of water leakage, please install the machine on the floor with sufficient waterproofing and drainage treatments.

* All the pressures are described using a gauge pressure.

* The above specifications may change due to technical modifications. Please confirm when placing your order.

* For further information please contact your local sales representatives.



ASIA :
DISCO HI-TEC (SINGAPORE) PTE., LTD.
Blk 2 Kaki Bukit Ave.1 #03-06/08 Kaki Bukit
Industrial Estate Singapore 417938
Phone:65-6747-3737 Fax: 65-6745-0266

DISCO HI-TEC (MALAYSIA) SDN. BHD.
Penang Regional Office
Phone:60-4-644-5502 Fax:60-4-645-2285

DISCO HI-TEC (THAILAND) CO., LTD.
Phone:66-2-6188441 Fax:66-2-6188440

DISCO TECHNOLOGY (SHANGHAI) CO., LTD.
Area E, 3rd Floor, Building A1 No.381 FuTeXiYi Road,
WaiGaoQiao Free Trade Zone Shanghai, P. R. China 200131
Phone:86-21-5866-2516 Fax: 86-21-5866-2517

ASIA AGENT :
New Tronics Co., Ltd.
Flat F, 11/F, Valiant Ind. Bldg. 2-12 Au Pui Wan Street,
Fotan Shantin, N.T. HONG KONG
Phone:852-26671431 Fax: 852-26874283

Happy Pole, Ltd.
8th floor, 9-1, No.41 Section 2, Roosevelt Road Taipei,
Taiwan R.O.C.
Phone:886-22-3960651 Fax: 886-22-3943943

Aurotech Systems(Phil's), Inc.
121 Buencamino Street Alabang, Muntinlupa PHILIPPINES
Phone:63-2-809-0155 Fax: 63-2-807-7419

D.I. Corporation
D.I. Building 58-6 Nonhyun-Dong Kangnam-ku, Seoul KOREA
Phone:82-2-546-5501 Fax:82-2-3446-8087

U.S.A. :
DISCO HI-TEC AMERICA, INC.
3270 Scott Blvd, Santa Clara, CA 95054-3011 U.S.A.
Phone:1-408-987-3776 Fax:1-408-987-3785

Eastern Regional Sales & Service Office
Phone:1-603-656-9019 Fax:1-603-656-9018
Southeastern Regional Sales & Service Office
Phone:1-919-468-6003 Fax:1-919-468-6004
Central Regional Sales & Service Office
Phone:1-972-267-9500 Fax:1-972-267-5612

Southwestern Regional Sales & Service Office
Phone:1-602-431-1412 Fax:1-602-431-1437
Northwest Regional Sales & Service Office
Phone:1-503-644-0323 Fax:1-503-643-8108

EUROPE :
DISCO HI-TEC EUROPE GmbH
Liebigstrasse 8 D-85551 Kirchheim B.Muenchen Germany
Phone:49-89-90903-0 Fax:49-89-90903-199

DISCO HI-TEC FRANCE SARL. Provence Head Office
Phone:33-442-910020 Fax:33-442-910029

DISCO HI-TEC U.K. LTD.
Phone:44-1342-313165 Fax:44-1342-313177

DISCO HI-TEC MOROCCO SARL
Phone:212-6-136-94-04 Fax:212-22-97-38-88

DISCO CORPORATION

13-11 Omori-Kita 2-chome, Ota-ku, Tokyo 143-8580, Japan
Tel:03-4590-1100 Fax:03-4590-1075 • www.disco.co.jp